

Replacement Guide

For E-Tether Pens

Copyright © 1995 - 2014 Topaz Systems Inc. All rights reserved.

For Topaz Systems, Inc. trademarks, visit www.topazsystems.com/termsconditions.html.

Steps

1. Locate the bay where the e-tether pen attaches to the Topaz tablet (see Figure 1).
2. Remove the screw that secures the bay cover to the Topaz tablet with a Phillips screwdriver. This cover prevents the pen from being removed from the pad. (see Figure 2).
3. Remove the bay cover and remove the 1/8" plug from the Topaz tablet and replace it with a new e-tether pen. (see Figure 3).
4. After the e-tether pen is replaced, replace the bay cover and screw to secure.

For more information regarding products and support, please visit the Topaz website at www.topazsystems.com.



Figure 1

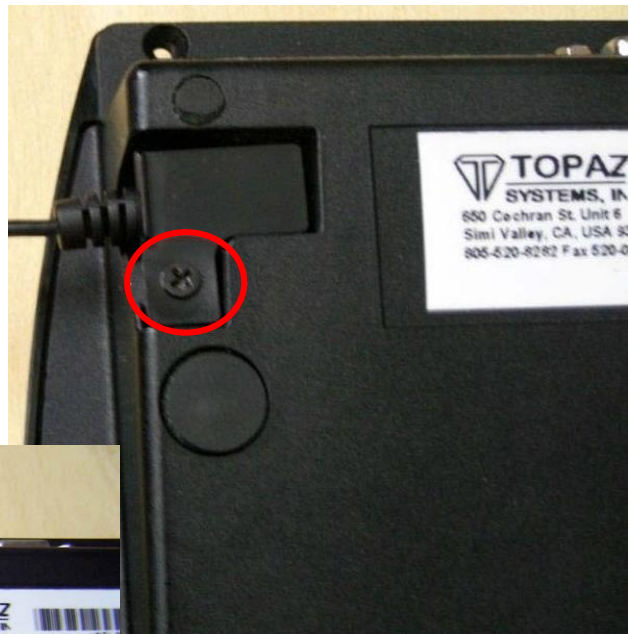


Figure 2



Figure 3