

Signature Pad Screen Overlay Installation

This manual will guide you through installing your screen overlay. Screen overlays are intended for use with the SigLite 1x5 (T-S460), SigLite Slim 1x5 (T-S461), SigLite LCD 1x5 (T-L460/T-LBK460), and SigLite LCD 4x3 (T-LBK750).



1. Step 1



Ensure your Topaz signature pad's signing surface is clean. Remove any dust or dirt from the screen with a soft, lint-free cloth.

By doing this, you can prevent bubbles from forming underneath the screen protector later in the process.

2. Step 2

Peel an edge of the paper backing from the screen protector, as shown in the image on the right. This will make the application process easier. Take care to touch the adhesive side of the overlay as little as possible.

Note: Keep the adhesive side of the overlay facing downward so that dust and particles don't fall and stick to it during the application process.

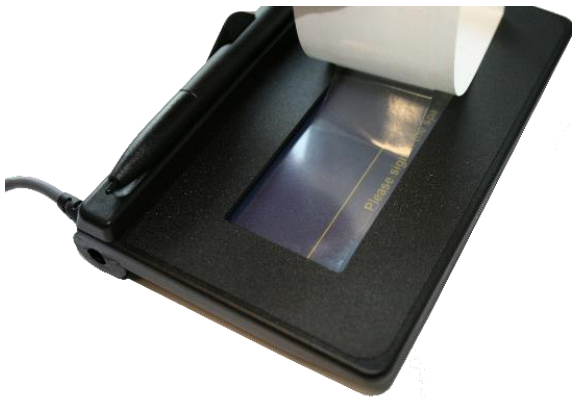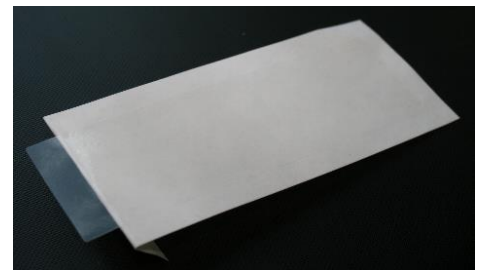

3. Step 3

Align the peeled-back edge of screen protector with the edge of your signature pad's screen. As you slowly peel back the paper backing, allowing the screen protector to connect with the pad, press your fingers firmly along the screen protector to push out any bubbles.

4. Step 4

With the screen protector applied, if there are any bubbles left under it, press firmly with your fingers or any stiff surface (a credit card works nicely) and push the bubbles toward the edges of the screen protector.

