



# Matrox<sup>®</sup> Avio<sup>™</sup> Series

Avio F120

## User Guide

20158-301-0110  
2012.12.04

---

# Contents

<b>About this user guide</b> .....	<b>4</b>
Using this guide .....	4
More information .....	4
<b>Overview</b> .....	<b>5</b>
Features .....	5
<b>Connecting your Avio F120 unit</b> .....	<b>7</b>
How it works .....	7
Before you begin .....	8
Connection overview .....	8
Avio F120 Transmitter – Front .....	8
Avio F120 Transmitter – Back .....	9
Avio F120 Receiver – Front .....	9
Avio F120 Receiver – Back .....	10
Connector descriptions .....	10
Description of LEDs .....	12
<b>Validating your Avio setup</b> .....	<b>13</b>
Keyboard and mouse .....	13
Monitors .....	13
Optical connection .....	13
Audio .....	13
<b>Configuring your Avio product</b> .....	<b>14</b>
Accessing the OSD menus .....	14
OSD main menu .....	14
Information .....	15
EDID Management .....	16
Volume .....	17
Options .....	17
<b>Product information</b> .....	<b>18</b>
Specifications .....	18
Avio F120 .....	18
Environmental .....	18
Power consumption and supply voltage .....	18

Audio .....	19
Notes .....	19
Digital flat panel information .....	20
<b>Appendix 1 – Connection overview .....</b>	<b>21</b>
Host connections .....	21
Optional local connections .....	21
PS/2 connectors .....	21
Transmitter .....	21
Receiver .....	21
Connection setup .....	21
<b>Appendix 2 – Mounting your units .....</b>	<b>23</b>
Rack mounting kit .....	23
Mounting guidelines .....	24
<b>Customer support .....</b>	<b>25</b>
Matrox Web .....	25
Technical support .....	25
Information we need .....	25
Firmware package .....	25
View your warranty information .....	26
Register your Matrox product .....	26
<b>Index .....</b>	<b>27</b>

---

# About this user guide

Your Matrox user guide provides information on installing and using your Matrox hardware.

---

## Using this guide

This guide assumes you're familiar with basic functions like click, right-click and double-click, and that you're familiar with the basics of the operating system you're using. Also, we use the following conventions:

- **Bold** for headings and for references to text that appears on-screen.
- *Italics* for file names, paths, publication titles, and new terms.
- ***Bold Italics*** for emphasis.
- Keyboard keys in square brackets, with a plus sign separating keys that you press simultaneously. For example: press [Ctrl]+[Alt]+[Del] to start Windows Task Manager.
- Arrows (“→”) to separate ordered directions. For example, “click **OK** → **Close** → **OK**” is the same as “click **OK**, then click **Close**, then click **OK**”.
- [Green](#) for cross-references. If you're viewing online, click green text to jump to what's being referenced.

---

## More information

Be sure to check for any last-minute release notes included with your product. Also, check the Matrox Web site ([www.matrox.com/graphics](http://www.matrox.com/graphics)) for the latest Matrox software, technical support, and product information.

---

# Overview

Thank you for purchasing a Matrox Avio product. Avio Series products are KVM (Keyboard Video Mouse) extenders that consist of a transmitter and receiver unit pair connected by a fiber optic cable. These units allow you to operate a computer up to two (2) kilometers away. These products separate your monitors, keyboard, mouse, audio, and USB devices from your computer.

---

## Features

Your Matrox Avio product has the following features:

- Uncompressed transmission delivers exceptional image quality and smooth HD video playback without any dropped frames.
- Extends two (2) single-link DVI displays with a maximum resolution of 1920 x1200 or one (1) dual-link DVI display with a maximum resolution of 2560 x 1600.
- Supports a maximum distance of 300 m (984 ft) in multi-mode and 2 km (6562 ft) in single-mode (optional upgrade).
- DDC compliance and advanced EDID management ensure a reliable communication between the system and the displays connected to the receiver unit.
- Local connectors on the transmitter unit serve as a secondary user access to the host system.

---

## Hardware supplied\*

- **Avio F120 transmitter unit** – Avio unit, multi-mode transceiver, 2 DVI-D cables, one 1 USB cable (A to B connectors), 1 power supply
- **Avio F120 receiver unit** – Avio unit, multi-mode transceiver, 1 power supply



**Note:** The hardware and cables supplied have been tested to work with your Matrox product. We strongly recommend you use these cables when connecting your devices.

---

## Hardware required (sold separately)

- LC-LC optical cable - multi-mode (62.5/125  $\mu$ m (OM1), 50/125  $\mu$ m (OM2, OM3, or OM4)) or LC-LC optical cable - single-mode (9/125  $\mu$ m (OS1 or OS2))

---

\* The hardware supplied with your Matrox product may vary depending on the SKU or part number of your product. For more information, contact your Matrox representative.

---

## Optional hardware (sold separately)

- Single-mode transceivers
- Male-to-male audio cables with mini-stereo (3.5 mm) connectors
- Male-to-male PS/2 cables
- USB A to mini-B cables
- Rack mounting kit



**Note:** To purchase any cables or adapters not included with your Matrox product, see the Matrox online store ([shopmatrox.com](https://shopmatrox.com)). For a single-mode transceiver upgrade, contact your sales representative.

---


# Connecting your Avio F120 unit

---

## How it works

Matrox Avio consists of a transmitter unit and a receiver unit connected by a fiber optic cable.

A Matrox Avio environment is made up of four (4) areas defined around its transmitter and receiver units:

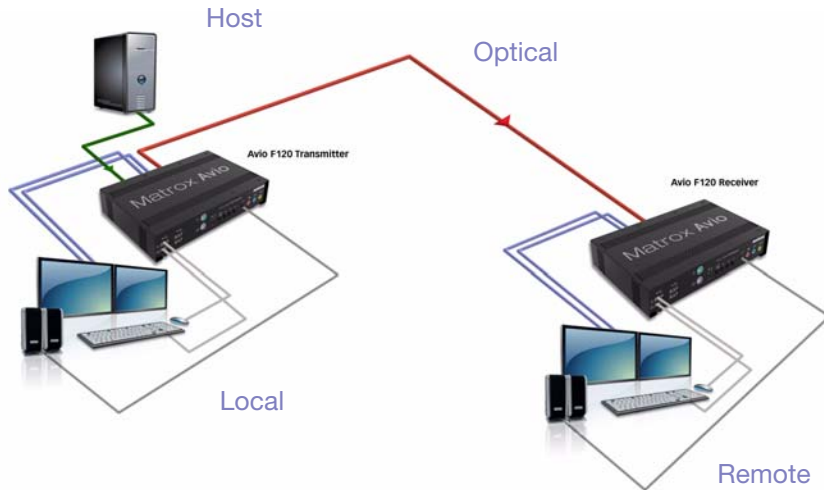

- **Host** – Connections between the host system and the transmitter unit. The computer is the only host device. You must connect the main USB and monitors. To use the sound connectors at the front of your transmitter or receiver units, you also need to connect the sound input and output of your computer to the transmitter unit.

Host connections require male-to-male cables with the proper connectors.

- **Local** – Connections to the transmitter unit to control the host system. These connections are optional. Local devices can be a keyboard, a mouse, monitors, sound, and USB devices.
- **Optical** – Connection through a fiber optic cable between the Avio transmitter and the receiver units.
- **Remote** – Connections to the receiver unit to control the host system. Similar to the local connection, you can connect these remote devices: keyboard, mouse, monitors, sound, and USB HID devices.

---

## Before you begin

- A Duplex LC-LC fiber optic cable is required.
- Your Avio units provide the link between your host system and your monitor, keyboard, and mouse. Before you turn on your host system, connect your transmitter unit to your host system; connect your receiver unit to your transmitter unit; connect your monitors, keyboard, mouse, and other devices to your units; then turn on your devices and units.
- Monitors connected to the connectors labeled **1** on the transmitter and receiver units use the same display and monitor settings. This also applies to monitors connected to connectors labeled **2**.


---

## Connection overview

This section describes the connectors on your Avio F120 transmitter and receiver units. For more information on the OSD (On-Screen Display) controls of your Avio units, see [“Configuring your Avio product”](#), page 14.


---

### Avio F120 Transmitter – Front

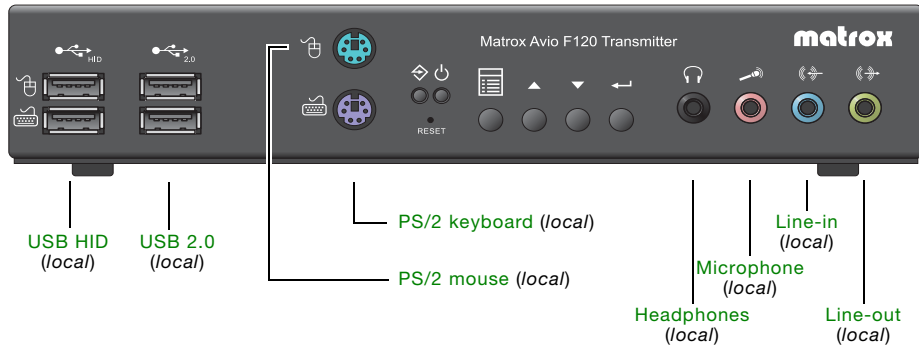





## Avio F120 Transmitter – Back

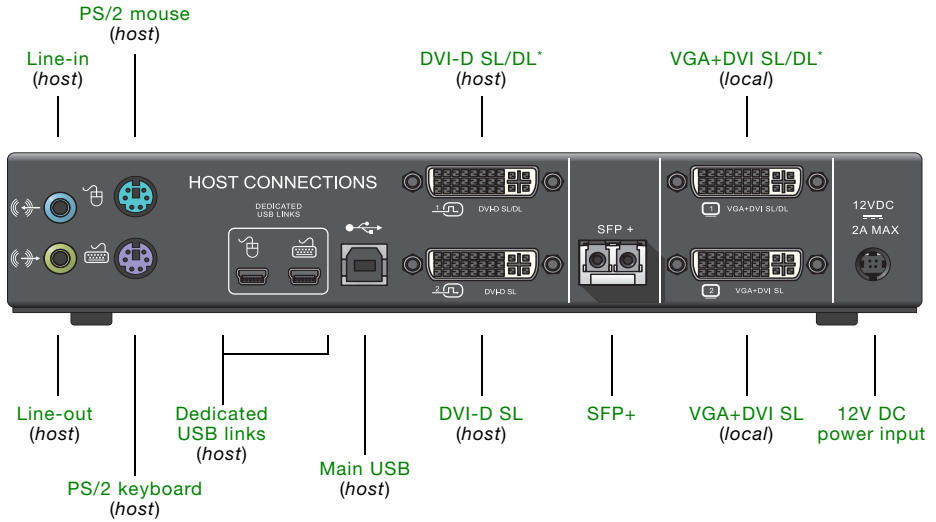

## Avio F120 Receiver – Front

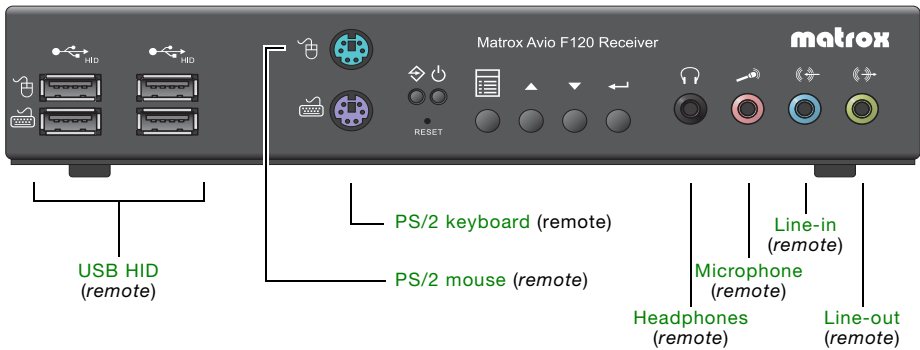


## Avio F120 Receiver – Back

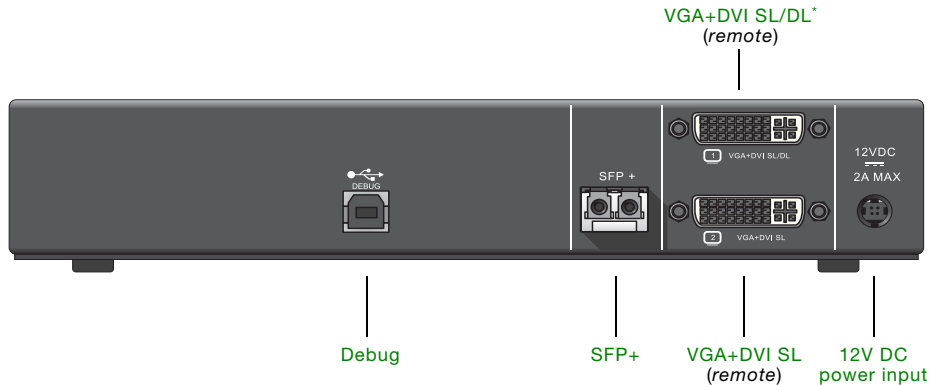

## Connector descriptions

Connector	TX	RX	Description	Required host connection
12V DC power input	✓	✓	Connect the 12V DC power supply included with your product to this connector. While the 12V DC power supply is connected to the unit and electrical socket, the power LED ( $\phi$ ) is active (green).	
Dedicated USB links	✓		For host systems that don't support keyboards and mice through a USB hub, connect your host system to the dedicated mouse and keyboard connectors on your transmitter unit to support a keyboard and mouse on your receiver unit. A USB A to mini-B cable is required to connect to each of these connectors. To purchase these cables, see the Matrox online store ( <a href="http://shopmatrox.com">shopmatrox.com</a> ).	
DVI-D SL/DL*	✓		Using the DVI-D cable provided with your transmitter unit, connect the primary graphics connector of your graphics hardware to this connector on your transmitter unit. <b>Note:</b> Your Avio unit only supports digital input signals.	
DVI-D SL*	✓		Using the DVI-D cable provided with your transmitter unit, connect the secondary graphics connector of your graphics hardware to this connector on your transmitter unit. <b>Note:</b> Your Avio unit only supports digital input signals.	

\* While using a Dual-Link display resolution (such as 2560 x 1600) with the **1** DVI SL/DL and **3** VGA+DVI SL/DL connectors of your units, the **2** DVI SL and **2** VGA+DVI SL connectors are disabled.



Connector	TX	RX	Description	Required host connection
Headphones	✓	✓	Connect your headphones to this connector. This connector supports a 3.5 mm stereo jack. While headphones are connected, the line-out connector remains enabled.	Line-in
Line-in	✓	✓	Connect the line-out connector of your computer (host) or of another audio device (local or remote) to this connector. This connector supports a 3.5 mm stereo jack.	Line-out
Line-out	✓	✓	Connect the line-in connector of your computer (host) or of another audio device (local or remote) to this connector. This connector supports a 3.5 mm stereo jack.	Line-in
Main USB	✓		Use the USB cable provided to connect your computer to your transmitter unit. This connection is required to use any USB device on your transmitter and receiver unit. <b>Note:</b> For host systems that don't support keyboards and mice through a USB hub, you need to use the dedicated USB connectors if you're using a USB keyboard and mouse.	
Microphone	✓	✓	Connect your microphone to this connector. This connector supports a 3.5 mm stereo jack.	Line-out
PS/2 keyboard	✓	✓	Connect your PS/2 keyboard to this connector. <b>Host:</b> To be able to connect your computer to the host PS/2 keyboard connector on your transmitter, you need a male-to-male PS/2 cable. To purchase this cable, see the Matrox online store ( <a href="http://shopmatrox.com">shopmatrox.com</a> ).	PS/2 keyboard
PS/2 mouse	✓	✓	Connect your PS/2 mouse to this connector. <b>Host:</b> To be able to connect your computer to the host PS/2 mouse connector on your transmitter, you need a male-to-male PS/2 cable. To purchase this cable, see the Matrox online store ( <a href="http://shopmatrox.com">shopmatrox.com</a> ).	PS/2 mouse
SFP+	✓	✓	Use a Duplex LC-LC fiber optic cable to connect your Avio transmitter and receiver units to each other. While a fiber optic cable is connected to the unit and your unit is plugged in, the optical connection LED (  ) is active (green).	
USB 2.0	✓		Connect your USB devices to this connector.	Main USB
Debug		✓	This USB connector is reserved for Matrox technical support use only.	

Connector	TX	RX	Description	Required host connection
<b>USB HID</b>	✓	✓	Connect only your USB HIDs (Human Interface Devices, such as keyboard and mouse) to this connector. A maximum of four (4) USB HIDs can be connected to your receiver unit.	TX: Main USB RX: Main USB or Dedicated USB links
<b>VGA+DVI SL*</b>	✓	✓	Connect your analog (VGA) monitor or digital (DVI) single-link monitor to this connector. Monitors attached to this connector on the transmitter <b>and</b> receiver units use the same display resolution and monitor settings.	DVI-SL
<b>VGA+DVI SL/DL*</b>	✓	✓	Connect your analog (VGA) monitor or digital (DVI) single-link or dual-link monitor to this connector. Monitors attached to this connector on the transmitter <b>and</b> receiver units use the same display resolution and monitor settings.	DVI-SL/DL

\* While using a dual-link display resolution (such as 2560 x 1600) with the **1** DVI SL/DL and **1** VGA+DVI SL/DL connectors of your units, the **2** DVI SL and **2** VGA+DVI SL connectors are disabled.


## Description of LEDs

The LEDs on your Matrox unit provide status information on your unit and its optical connection. The following describes the different LEDs:

	Green	Red	No LED (black)
 <b>Power and status</b>	Unit is operational.	Error detected.	No power.
	Green	Orange	Red
 <b>Optical connection</b>	Optical connection active.	No transceiver detected or no optical connection established.	Major communication error.

---

# Validating your Avio setup

Here are some areas you should check to make sure your Avio is properly set up. Before you begin, make sure the power LED (  ) on your Avio units is active (green).

---





## Keyboard and mouse

- The keyboard and mouse on your Avio units must support the same connector type as the connection of your transmitter unit to your host system (PS/2 or USB).
- If your transmitter unit is connected through the standard USB connector, your host system must support a keyboard through a USB hub to support a keyboard on your receiver unit.

For host systems that don't support keyboards and mice through a USB hub, connect your transmitter unit to your host system using both the standard USB and the dedicated USB connectors for mouse and keyboard.



---

## Monitors

- Make sure you're using the DVI-D cable provided with your transmitter unit to connect the graphics hardware of your host system to your transmitter unit.
- Monitors on connectors labeled  on your transmitter and receiver units have to support the same settings.
- Monitors on connectors labeled  on your transmitter and receiver units have to support the same settings.
- If you're using a dual-link monitor on connector , connector  is disabled.
- If you're using an analog monitors, make sure the EDID mode used by your Avio units is an active EDID mode. For more information, see [“EDID Management”](#), page 16.

---

## Optical connection

If the power LED (  ) is active (green) but the optical connection LED (  ) detects no valid transmission (LED is either orange or red):

- Make sure your transceiver (SFP+) is properly inserted.
- Make sure you're using the proper fiber optic cable.
- Make sure your optical cables are properly connected on your Avio units.

---

## Audio

- To use audio on your Avio units, the line-in and line-out from your host system must be respectively connected to the line-out and line-in connectors of your transmitter unit.


---




# Configuring your Avio product


This section describes the Avio OSD (On-Screen Display) menu, options, and controls. With the OSD menu, you can configure and view information on your units.

---

## Accessing the OSD menus

To view the OSD menu, press the Menu button (  ) on your Avio unit. The menu appears on the screen of the monitors connected to your unit.

To navigate through the menu or to select the value of a control, use the Up (  ) and Down (  ) buttons on your unit. To open a menu or confirm a selection, press the Enter button (  ).

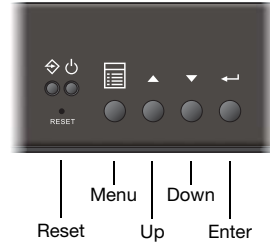


---

## OSD main menu

The OSD menu of your Avio product has the following options:

- **Information** – to view information on your connection status, fiber optic transceiver, and Avio unit.
- **EDID management** – to select how monitor settings are provided to your host system.
- **Volume** – to control the volume of the audio inputs and outputs of your unit.
- **Options** – to view the options for the OSD menu.


## Information

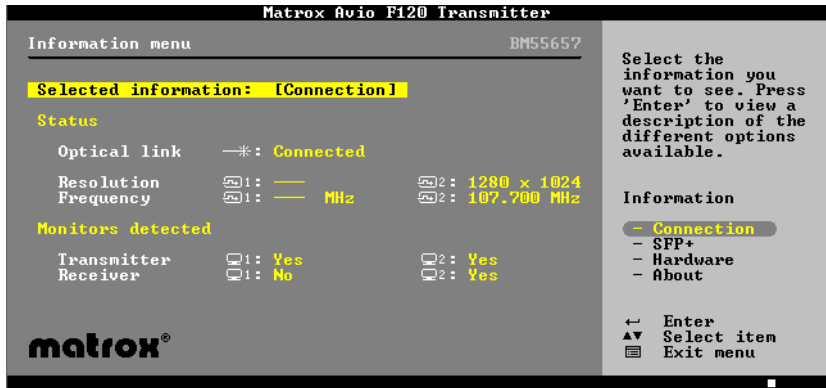

This menu allows you to view the following:

- Connection status of your optical link, the resolution, and the frequency used by your monitor connectors. It also lists if monitors are connected to your transmitter and receiver units.
- Information on your optical transceiver such as model, part number, serial number, laser wavelength, temperature, and electrical data.
- Temperature of the main controller of your Avio unit.
- Model and serial number of your Avio unit, and the version numbers of the firmware package and its firmware.

## EDID Management

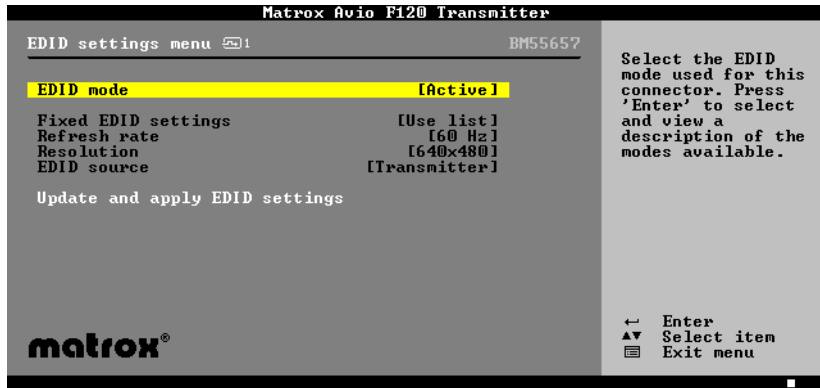

This menu allows to select which EDID settings are provided to your host system by your transmitter and receiver units. Your Avio product supports two (2) EDID modes:

- **Active** – Uses the EDID settings of the monitor on the connector. While using this mode, the EDID settings of the monitor connected to your receiver unit are used first. If no monitor is detected on your receiver unit (for example, your monitor or optical cable is disconnected), the settings of the monitor connected to your transmitter unit are used.


Disconnecting your optical cable has the same effect as disconnecting the monitors on your receiver unit.

- **Fixed** – Uses the EDID settings for a selected resolution and refresh rate, or uses the EDID settings from a monitor connected to your transmitter or receiver unit. The EDID settings are stored on your transmitter unit. These settings are used until you update them or until you change the EDID mode.

Disconnecting your optical cable has no effect as the EDID settings for your monitors are always the settings saved on your transmitter unit.



## Volume

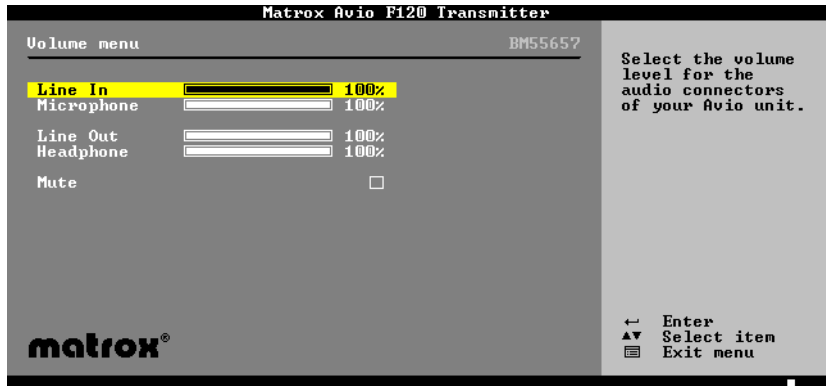

This menu allows you to set the volume for the audio output connectors on your unit. You can also mute all audio connectors on your unit.

## Options



This menu allows you to select the language of the OSD (if multiple languages are supported), disable the OSD buttons on your unit, set the transparency level of the menu, and choose to list the temperature in Celsius or Fahrenheit.

If you disable the OSD buttons, you can access the OSD menu by quickly pressing [Reset] with the tip of a paperclip.

You can also update the firmware of your unit from this menu.

---

# Product information

---

## Specifications

---

### Avio F120

	Transmitter	Receiver
Monitors supported	2 single-link or 1 dual-link	2 single-link or 1 dual-link
Supported resolutions	All single-link DVI and dual-link DVI resolutions	
Video input connectors	2× DVI-D	–
Video output connectors	2× DVI-I	2× DVI-I
Dimensions	21.59 cm × 4.19 cm × 13.56 cm / 8.5" × 1.65" × 5.34"	
Laser emissions	850 nm laser compliant to 21CFR, Subpart J, Class 1	
EMC Certifications	Class A: ACMA, CE, FCC, VCCI, Korean notice	

---

## Environmental

Temperature, operational	5 to 40 °C (41 to 104 °F)
Temperature, non-operational storage and transportation	-40 to 70 °C (-40 to 158 °F)
Humidity, operational (indoor)	20 to 80% (non-condensing)
Humidity, non-operational storage and transportation	5% to 95% (non-condensing)
Atmospheric pressure, operational	650hPa (3,580 meters / 11,745 feet) to 1013hPa (0 meters / 0 feet)
Atmospheric pressure, non-operational and transportation	192hPa (12,000 meters / 39,370 feet) to 1020hPa (-50 meters / -164 feet)

---

## Power consumption and supply voltage

	Avio F120 unit
Power requirements	12V DC, maximum 2.5 A (2.5 A fuse for overcurrent protection)
Power connector	DIN 4 female (4-pin)

	<b>External power supply</b>
<b>Input AC voltage range</b>	100 to 240 V AC
<b>Input frequency</b>	50-60 Hz
<b>Input connector</b>	IEC 60320-C14
<b>Output voltage</b>	+12 V DC
<b>Output connector</b>	DIN 4 male (4-pin) with lock
<b>Maximum power consumption</b>	30 W

## Audio

<b>Stereo audio</b>	2 channel
<b>Bits per sample</b>	24 bits per channel, 2 channel (Left and Right)
<b>Sampling rate</b>	96 kHz
<b>Audio connector type</b>	3.5 mm stereo audio jacks
<b>Stereo crosstalk</b>	-80 dB
<b>Full-scale voltage</b>	1 V <sub>RMS</sub> (2.83 V <sub>P-P</sub> )
<b>Minimum impedance</b>	10k Ohms
<b>Total Harmonic distortion and Noise (THD+N)</b>	< -80 dB
<b>Signal-to-noise ratio (SNR)</b>	>76 dBA

## Notes


- An Avio F120 transmitter requires an Avio F120 receiver.
- Your Matrox product is 100% VGA compatible and supports all VESA® standards: VBE 3.0 (Super VGA modes), DPMS (energy saving), DDC-2B (Plug-and-Play monitor), and DDC-CI.
- The display resolutions and refresh rates available depend on your graphics hardware, display driver, software monitor settings, and monitor. For information on the capabilities of your monitor, see your monitor documentation.
- Your transmitter and receiver units use the same multi-display configuration and monitor settings (such as display resolution and refresh rate).

---

## Digital flat panel information

- TMDS® (Transition Minimized Differential Signaling) encoding for DVI connectors
- DDWG (Digital Display Working Group) compliant DVI connector
- EDID (Extended Display Identification Data) 1.2 and 1.3 support
- VESA Display Data Channel (DDC) support

# Appendix 1 – Connection overview

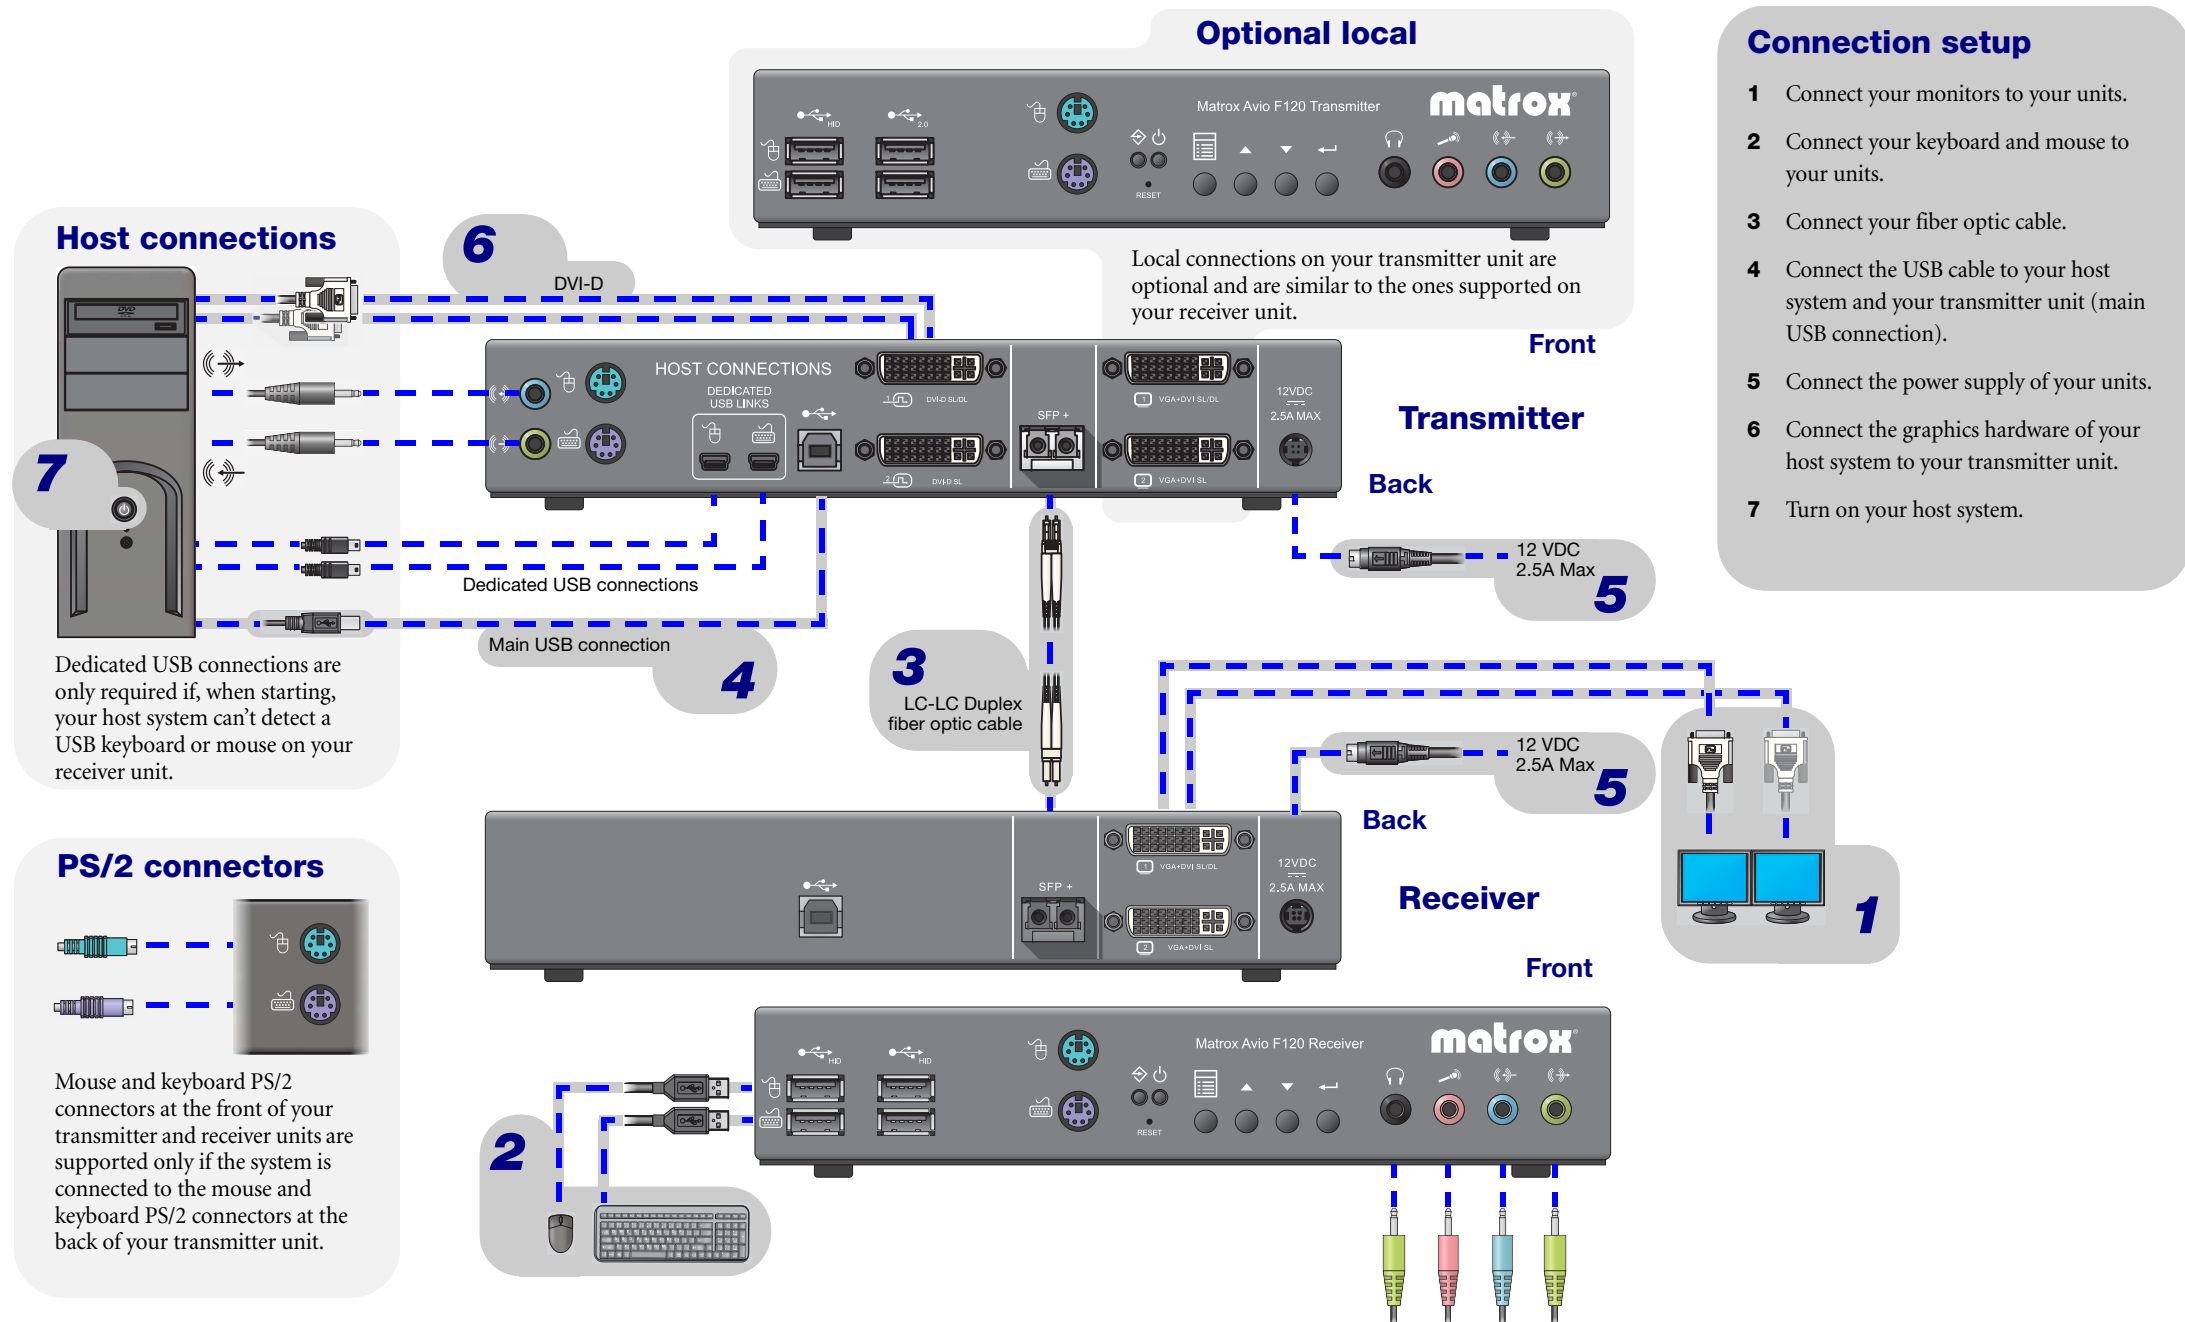

- ### Connection setup
- 1 Connect your monitors to your units.
  - 2 Connect your keyboard and mouse to your units.
  - 3 Connect your fiber optic cable.
  - 4 Connect the USB cable to your host system and your transmitter unit (main USB connection).
  - 5 Connect the power supply of your units.
  - 6 Connect the graphics hardware of your host system to your transmitter unit.
  - 7 Turn on your host system.

**Host connections**

**7**

Dedicated USB connections are only required if, when starting, your host system can't detect a USB keyboard or mouse on your receiver unit.

**PS/2 connectors**

Mouse and keyboard PS/2 connectors at the front of your transmitter and receiver units are supported only if the system is connected to the mouse and keyboard PS/2 connectors at the back of your transmitter unit.

**Optional local**

Local connections on your transmitter unit are optional and are similar to the ones supported on your receiver unit.

**1**

**6**

**4**

**3**

**5**

**5**

**2**

---


## Notes

## Appendix 2 – Mounting your units


This section provides guidelines for mounting your Avio unit using the rack mounting kit (sold separately). To purchase the rack mounting kit, contact your Matrox sales representative.

### Rack mounting kit

Your Avio unit can be mounted on a 19-inch mounting shelf. You can mount two (2) units side by side on a single shelf.

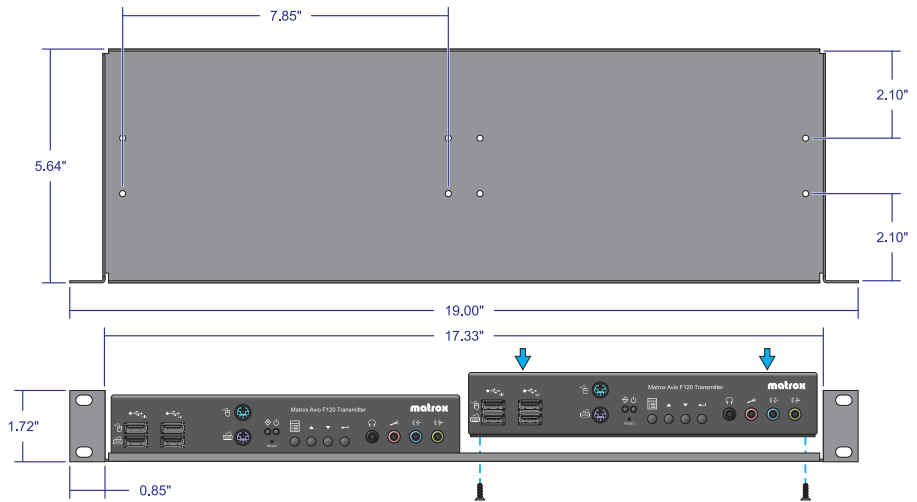

- To install your mounting shelf, fasten it to the rack as per your rack's instructions. Head screws compatible with most rack mounts are provided.
- The mounting shelf has existing holes for your Avio unit that allow the shelf to be mounted facing forward or backward.
- To respect the height of a 1U shelf, you need to remove the four (4) rubber pads under your Avio unit before you secure the unit to the shelf.
- Your Avio unit has two (2) mounting holes under its casing. Use two (2) 10 mm M3 mounting screws provided with your mounting shelf to secure each unit.

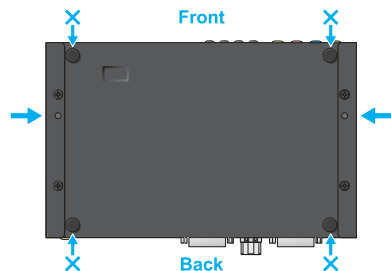

- Use a hand screwdriver to carefully tighten each screw. Make sure not to overtighten the screws.

---

## Mounting guidelines

To prevent damage to your Matrox hardware, read the following guidelines before mounting your Matrox hardware:

- Make sure not to block the ventilation holes on your unit.
- Don't stack anything directly over the unit.
- Make sure the cables connected to your unit are properly secured and that no tension is applied to them.
- Make sure the ambient temperature doesn't exceed the maximum recommended temperatures. For more information, see [“Environmental”](#), page 18.

Once your Avio unit is mounted, you can connect your system, monitors, and devices to your Avio unit.



---

# Customer support

---

## Matrox Web

Our Web site has product literature, press releases, technical material, a sales office list, trade show information, and other relevant material. Visit the Matrox Graphics Web site at [www.matrox.com/graphics](http://www.matrox.com/graphics).

---

## Technical support

Matrox values your business and offers professional support for your Matrox product.

*If your product was purchased through a Matrox dealer*, contact your dealer for product support. This is the quickest and most effective method of technical assistance. Your dealer is familiar with your complete system.

*If your product was purchased through Matrox*, contact your Matrox representative or visit our technical support Web site at [www.matrox.com/graphics/support](http://www.matrox.com/graphics/support).

---

## Information we need

Please give a complete description of the problem, and include:

- Matrox product serial number, model number, revision number, and firmware number.
- Computer brand and model name.
- Graphics card manufacturer, model number, revision number, BIOS number, driver type and version.
- Monitors brand and model name.
- Operating system, version, and service pack.
- Brand and model of any other cards and devices installed on your system.

---

## Firmware package

A more recent firmware package may support more features and may offer increased capabilities (such as support for higher display resolutions). To obtain the latest firmware package, contact your Matrox sales representative or Matrox Technical Support.

---

## **View your warranty information**

Matrox makes warranty information available on the Matrox site ([www.matrox.com/graphics/en/about/warranty](http://www.matrox.com/graphics/en/about/warranty)).

---

## **Register your Matrox product**

Please register online ([www.matrox.com/graphics/en/registration](http://www.matrox.com/graphics/en/registration)) to be eligible for customer support, new product announcements, and information on special offers and upcoming events.

---

# Index

---

## A

Avio unit  
Specifications 18

---

## C

Customer support 25–26

---

## E

Environmental  
Specifications 18

---

## F

Firmware package 25

---

## L

LEDs 12

---

## N

Notes 19

---

## O

OSD 7, 14  
Accessing menu 14  
Options 14

---

## P

Power supply  
Specifications 18  
Product information 18–20  
Specifications 18

---

## R

Registration 26

---

## S

Specifications  
Avio unit 18  
Environmental 18  
Power supply 18  
Status LEDs 12

---

## T

Technical support 25

---

## U

User Guide  
About 4

---

## V

VESA 19  
VGA 19

---

## W

Warranty 26  
Web, Matrox 25

---

**USA**

---

**FCC Compliance Statement**

**Remark for the Matrox hardware products supported by this guide** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

**WARNING** Changes or modifications to this unit not expressly approved by the party responsible for the compliance could void the user's authority to operate this equipment. The use of shielded cables for connection of the monitor to the card is required to meet FCC requirements.

---

**CANADA**

---

**(English) Industry Canada Compliance Statement**

**Remark for the Matrox hardware products supported by this guide** These digital apparatus does not exceed the Class A limits for radio noise emission from digital devices set out in the Radio Interference Regulation of Industry Canada.

**(Français) Conformité avec les exigences du ministère de l'Industrie Canada**

**Remarque sur les produits matériels Matrox couverts par ce guide** Ce présent appareil numérique n'émet aucun bruit radioélectrique dépassant les limites applicables aux appareils numériques de Classe A prescrites dans le Règlement sur le brouillage radioélectrique édicté par Industrie Canada.

---

**USA**

---

**(English) FDA (Food and Drug Administration) requirements for Laser Products**

**Remark for the Matrox hardware products supported by this guide** This product includes a 850 nm Laser Product compliant to 21CFR Subpart J Class 1.

---

**JAPAN**

---

**VCCI Compliance Statement**

**Remark for the Matrox hardware products supported by this guide** This is a Class A prlegaoeduct based on the standard of the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). If this equipment is used in a domestic environment, radio disturbance may occur, in which case, the user may be required to take corrective actions.

この装置は、クラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。 VCCI-A

---

**KOREA**

---

**KCC 전자파 적합 등록 안내 (Class A)**

이 기기는 업무용 (A 급) 으로 전자파적합등록을 한 기기이오니 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정 이외의 지역에서 사용할 수 있습니다.

### **(English) European user's information – Declaration of Conformity**



**Remark for the Matrox hardware products supported by this guide** These devices comply with EC Directive 2004/108/EC for a Class A digital device. They have been tested and found to comply with EN55022/CISPR22 and EN55024/CISPR24. In a domestic environment these products may cause radio interference in which case the user may be required to take adequate measures. To meet EC requirements, shielded cables must be used to connect the monitor and other peripherals to the card. These products have been tested in a typical class A compliant host system. It is assumed that these products will also achieve compliance in any class A compliant system.

### **(Français) Informations aux utilisateurs Européens – Déclaration de conformité**

**Remarque sur les produits matériels Matrox couverts par ce guide** Ces unités sont conformes à la directive communautaire 2004/108/EC pour les unités numériques de classe A. Les tests effectués ont prouvé qu'elles sont conformes aux normes EN55022/CISPR22 et EN55024/CISPR24. Le fonctionnement de ces produits dans un environnement résidentiel peut causer des interférences radio, dans ce cas l'utilisateur peut être amené à prendre les mesures appropriées. Pour respecter les impératifs communautaires, les câbles de connexion entre le moniteur ou autres périphériques et la carte doivent être blindés. Ces produits ont été testés dans un système hôte typique compatible classe A. On suppose qu'ils présenteront la même compatibilité dans tout système compatible classe A.

### **(Deutsch) Information für europäische Anwender – Konformitätserklärung**

**Anmerkung für die Matrox Hardware-Produktunterstützung durch dieses Handbuch** Diese Geräte entsprechen EC Direktive 2004/108/EC für ein digitales Gerät Klasse A. Sie wurden getestet und entsprechen demnach EN55022/CISPR22 und EN55024/CISPR24. In einer Wohnumgebung können diese Produkte Funkinterferenzen erzeugen, und der Benutzer kann genötigt sein, entsprechende Maßnahmen zu ergreifen. Um EG-Anforderungen zu entsprechen, müssen zum Anschließen des Monitors und anderer Peripheriegeräte an die Karte abgeschirmte Kabel verwendet werden. Diese Produkt wurden in einem typischen, der Klasse A entsprechenden, Host-System getestet. Es wird davon ausgegangen, daß diese Produkte auch in jedem Klasse A entsprechenden System entsprechend funktionieren.

### **(Italiano) Informazioni per gli utenti europei – Dichiarazione di conformità**

**Nota per i prodotti hardware Matrox supportati da questa guida** Questi dispositivi sono conformi alla direttiva CEE 2004/108/EC relativamente ai dispositivi digitali di Classe A. Sono stati provati e sono risultati conformi alle norme EN55022/CISPR22 e EN55024/CISPR24. In un ambiente domestico, questi prodotti possono causare radiointerferenze, nel qual caso all'utente potrebbe venire richiesto di prendere le misure adeguate. Per soddisfare i requisiti CEE, il monitor e le altre periferiche vanno collegati alla scheda grafica con cavi schermati. Questi prodotti sono stati provati in un tipico sistema host conforme alla classe A. Inoltre, si dà per scontato che questi prodotti acquisiranno la conformità in qualsiasi sistema conforme alla classe A.

### **(Español) Información para usuarios europeos – Declaración de conformidad**

**Observación referente a los productos de hardware de Matrox apoyados por este manual** Estos dispositivos cumplen con la directiva de la CE 2004/108/EC para dispositivos digitales de Clase A. Dichos dispositivos han sido sometidos a prueba y se ha comprobado que cumplen con las normas EN55022/CISPR22 y EN55024/CISPR24. En entornos residenciales, estos productos pueden causar interferencias en las comunicaciones por radio; en tal caso el usuario deberá adoptar las medidas adecuadas. Para satisfacer las disposiciones de la CE, deberán utilizarse cables apantallados para conectar el monitor y demás periféricos a la tarjeta. Estos productos han sido sometidos a prueba en un típico sistema anfitrión que responde a los requisitos de la clase A. Se supone que estos productos cumplirán también con las normas en cualquier sistema que responda a los requisitos de la clase A.

---

### **ROVI CORPORATION**

---

**(English)** This item incorporates copy protection technology that is protected by U.S. patent(s) and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

**(Français)** Ce produit intègre une technologie de protection des droits d'auteur qui est protégée par un ou plusieurs brevets américains et par d'autres droits de propriété intellectuelle de Rovi Corporation. L'ingénierie inverse et le désassemblage sont interdits.

**(Deutsch)** Dieses Produkt enthält Kopierschutztechnologien, die durch US-Patent(e) und andere Rechte am geistigen Eigentum der Rovi Corporation geschützt ist. Reverse Engineering und Demontage sind verboten.

**(Italiano)** Questo prodotto incorpora la tecnologia di protezione di copia protetta da uno o più brevetti USA e da altri diritti di proprietà intellettuale di Rovi Corporation. È vietato decodificare o disassemblare il prodotto.

**(Español)** Este producto incorpora tecnología de protección de copia que está protegida por patente(s) de EE. UU. y por otros derechos de propiedad intelectual de Rovi Corporation. La ingeniería inversa y el desmontaje están prohibidos.

---

#### EUROPE

---

**(English) European user's information - Directive on Waste Electrical and Electronic Equipment (WEEE)**

Please refer to the Matrox Web site ([www.matrox.com/environment/en/weee](http://www.matrox.com/environment/en/weee)) for recycling information.



**(Français) Informations aux utilisateurs Européens - Règlementation des déchets d'équipements électriques et électroniques (DEEE)**

Se référer au site Web de Matrox ([www.matrox.com/environment/en/weee](http://www.matrox.com/environment/en/weee)) pour l'information concernant le recyclage.

**(Deutsch) Information für europäische Anwender - Europäische Regelungen zu Elektro- und Elektronikgeräten (WEEE)**

Bitte wenden Sie sich an der Matrox-Website ([www.matrox.com/environment/en/weee](http://www.matrox.com/environment/en/weee)) für Recycling-Informationen.

**(Italiano) Informazioni per gli utenti europei - Direttiva sui rifiuti di apparecchiature elettriche ed elettroniche (RAEE)**

Si prega di riferirsi al sito Web Matrox ([www.matrox.com/environment/en/weee](http://www.matrox.com/environment/en/weee)) per le informazioni di riciclaggio.

---

## **Trademarks • Marques déposées • Warenzeichen • Marchi registrati • Marcas registradas**

Matrox Electronic Systems Ltd. /

Matrox Graphics Inc. .... Matrox®, DualHead®, ASM™, ATC™, AuroraVX3mp™, AuroraVX™, Avio™, DFC™, DLC™, DualHead2Go™, Epica™, Equinox™, Extio™, G400™, G450™, G550™, GXM™, ICP™, Maevox™, Marvel™, MED2mp™, MED2mp-DVI™, MED3mp-DVI™, MED4mp™, MED5mp-DVI™, MED5mp™, Millennium™, MMS™, Multi-Monitor Series™, MultiDesk™, Mura™, MuraControl™, Mura MPX™, Mystique™, P650™, P650™ Low-profile, P690™, P750™, Parhelia™, Parhelia™ APVe, Parhelia-512™, Parhelia-LX™, Parhelia HR256™, PJ4OLP™, QID™, Quad Information Display™, RAD™, Quick Connect™, MaxVIEW™, MGA™, MGA-G100™, MGA-G200™, Onyx™, PixelTOUCH™, PrecisionCAD™, Precision SGT™, QuickDesk™, RAD2mp™, RAD3mp™, RAD9mp™, RADQ2mp™, Rainbow Runner®, TheatreVUE™, TripleHead™, TripleHead2Go™, VDA™, Veos™, Xenia™

Adobe Systems Inc. .... Acrobat®, Reader®

Apple Computer, Inc. .... App Store®, Apple®, iPad®, Mac®, Mac OS®

Belden Inc. .... Belden®

Cisco Systems Inc. .... iOS®

Dolby Laboratories, Inc. .... Dolby®, Dolby Digital®

Intel Corporation .... Intel®, Pentium®, Thunderbolt™

Linus Torvalds .... Linux®

Microsoft Corporation .... Aero®, Direct3D®, DirectDraw®, DirectShow™, DirectX™, Microsoft®, MS-DOS®, PowerPoint®, Windows®, Windows NT®, Windows Server®, Windows Vista®

PCI-SIG .... PCI™, PCI-X®, PCIe®, PCI Express®

Radio Corporation of America..... RCA®

Rovi Corporation .... Macrovision®

Silicon Graphics, Inc. .... OpenGL®

Silicon Image, Inc. .... PanelLink™, TMDS®

U.S. Environmental Protection Agency ..... ENERGY STAR®

Video Electronics Standards Association ... DisplayPort™

Wibu-Systems ..... WIBU®

• (English) Registered trademarks are registered in the United States, Canada, and/or other countries. All other nationally and internationally recognized trademarks and tradenames are hereby acknowledged. • (Français) Les marques déposées sont déposées aux États-Unis, au Canada et/ou dans d'autres pays. Toutes les autres marques et tous les autres noms déposés reconnus nationalement ou internationalement sont également reconnus par les présentes. • (Deutsch) Die eingetragenen Warenzeichen sind in den USA, Kanada und/oder anderen Ländern registriert. Alle sonstigen national und international bekannten Warenzeichen und Produktnamen werden hiermit anerkannt. • (Italiano) I marchi registrati sono registrati negli Stati Uniti, in Canada e/o in altri paesi. Tutti gli altri marchi registrati e nomi commerciali riconosciuti a livello nazionale e internazionale sono ugualmente riconosciuti qui. • (Español) Las marcas registradas están registradas en los EE.UU., Canadá u otros países. Por medio del presente se reconocen todas las demás marcas y nombres comerciales reconocidos a nivel nacional e internacional.

---

## **(English) Disclaimer**

THE INFORMATION IN THIS GUIDE IS SUBJECT TO CHANGE AT ANY TIME AND WITHOUT NOTICE.

Matrox Graphics Inc. reserves the right to make changes in specifications at any time and without notice. The information provided by this document is believed to be accurate and reliable at the time it is written. However, no responsibility is assumed by Matrox Graphics Inc. for its use, for its reproduction and/or distribution, in whole or in part; nor for any infringements of patents or other rights of third parties resulting from its use.

---

## **(Français) Responsabilité**

LES INFORMATIONS CONTENUES DANS CE MANUEL PEUVENT ÊTRE MODIFIÉES EN TOUT TEMPS ET CE SANS PRÉAVIS.

Les Graphiques Matrox Inc. se réserve le droit de modifier les spécifications en tout temps et ce sans préavis quelconque. Les informations contenues dans ce manuel sont reconnues comme étant précises et fiables à la date de rédaction. Cependant, Matrox Graphics Inc. n'assume aucune responsabilité concernant leur utilisation, leur reproduction et/ou distribution, en tout ou en partie, ni leur contrefaçon de brevets ou de tout autre droit appartenant à des tiers résultant de leur utilisation. Aucune licence n'est accordée sur aucun brevet ou droit d'exploiter un brevet de Matrox Graphics Inc.

---

## **(Deutsch) Haftungsablehnungserklärung**

DIE IN DIESEM HANDBUCH ENTHALTENEN ANGABEN UND DATEN KÖNNEN OHNE VORHERIGE ANKÜNDIGUNG GEÄNDERT WERDEN.

Die Matrox Graphics Inc. behält sich das Recht vor, jederzeit und ohne Ankündigung technische Daten zu ändern. Zum Zeitpunkt der Erstellung dieses Handbuchs sind die Inhalte korrekt und verlässlich. Weiterhin übernimmt Matrox Graphics Inc. keinerlei Verantwortung für die Benutzung dieses Handbuchs, die Vervielfältigung und/oder Verteilung im Ganzen oder zum Teil; weder für Verstöße gegen Patentrechte noch für andere Rechte Dritter, die aus seinem Gebrauch resultieren mögen. Es werden keinerlei Lizenzrechte gewährt für sämtliche Patente oder Patentrechte der Matrox Graphics Inc.

---

## **(Italiano) Discrezionalità**

LE INFORMAZIONI CONTENUTE NEL PRESENTE DOCUMENTO SONO SOGGETTE A MODIFICHE IN QUALUNQUE MOMENTO E SENZA PREAVVISO.

Matrox Graphics Inc. si riserva il diritto di apportare variazioni di qualunque tipo alle specifiche tecniche in qualunque momento e senza alcun preavviso. Le informazioni contenute in questa documentazione sono ritenute corrette e attendibili al momento della pubblicazione. In ogni caso, non è imputabile a Matrox Graphics Inc. nessuna responsabilità per il loro utilizzo, per la loro distribuzione e/o riproduzione completa o in parte, come nessuna violazione a brevetti o diritti di altri produttori derivante dal loro utilizzo.

---

## **(Español) Renuncia**

LA INFORMACION QUE CONTIENE EL PRESENTE MANUAL ESTA SUJETA A CAMBIOS SIN PREVIO AVISO EN CUALQUIER MOMENTO.

Matrox Graphics Inc. se reserva el derecho de realizar modificaciones en cualquier momento y sin previo aviso. La información facilitada en este documento se considera que es exacta y fiable hasta la fecha de publicación. Sin embargo, Matrox Graphics Inc. no asume ninguna responsabilidad por su uso, por su reproducción y/o distribución parcial o total; ni por cualquier infracción de patentes u otros derechos de terceras partes derivados de su uso. No se concede ninguna licencia bajo cualesquiera patentes o derechos de patentes de Matrox Graphics Inc.



**Matrox Graphics Inc.**

1055 Saint Regis Boulevard  
Dorval, Quebec, Canada H9P 2T4

North America: 1-800-361-1408

International: (514) 822-6000

Email: [graphics@matrox.com](mailto:graphics@matrox.com)

Web site: [www.matrox.com/graphics](http://www.matrox.com/graphics)

Technical support:

[www.matrox.com/graphics/support](http://www.matrox.com/graphics/support)

To locate the sales office nearest you, visit

[www.matrox.com/graphics/contact](http://www.matrox.com/graphics/contact)

**matrox**<sup>®</sup>  
Graphics for Professionals